

Recommended QUAD Electrical Placement
 (Provided by Customer)
 Recommend 110 volt 20 amp service
 for each hair stylist



Finish Schedule - J11
Face Color -
Top Color -
Toe Color -
Reveal / Accent Color -
Hardware - Chrome Wire
Interior - Black
Other (Specify) -

		Jeffco 5269 U.S. Hwy. 158 Advance, NC 27006
Title: J11 Java Formula B2B		
Size: NTS	Drawing Number:	Drawn By:
Date:	Sheet	

This item is attached to the wall with wood screws. 3" wood screws and decorative washers are provided for wood framed walls. Fasteners for other wall types are to be obtained locally. Screw through the back panel in locations which will be inconspicuous after installation. Suggested locations include: under shelves, behind drawers, and locations hidden by products or supplies.

Mirrors are provided with mirror clips and wood screws. Two different sizes of screws are provided: 3/4" screws for attaching the mirror to wood cabinet components and 1" screws for going through gypsum board into a wood framed stud wall. Use the 3/4" screws and the factory drilled holes.

Holes are predrilled for the ledge clamps at factory. Hardware for attaching to panel is also included.

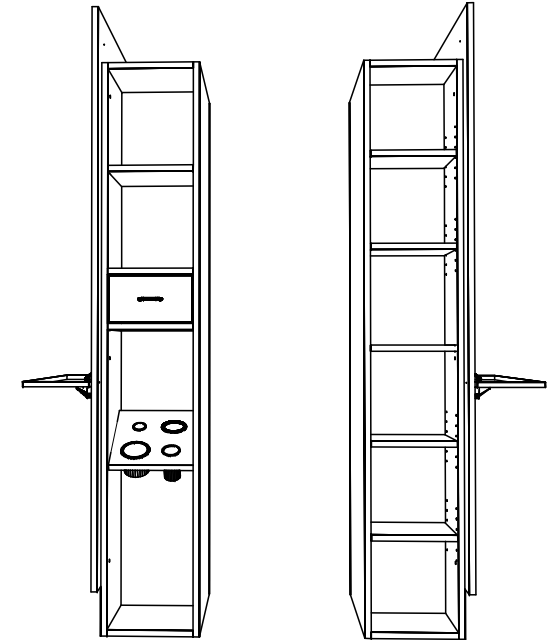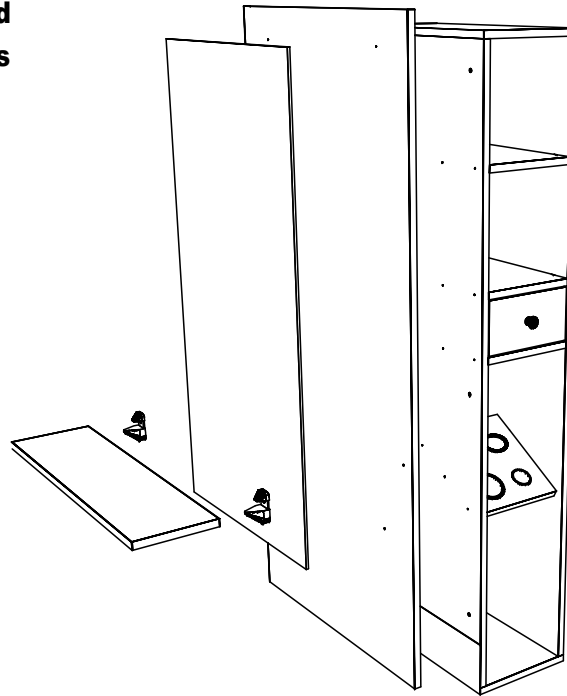

Use the six provided connector bolts and nuts to attach both sides together. Assembly holes are factory drilled.

Finish Schedule - J11

Face Color -
 Top Color -
 Toe Color -
 Reveal / Accent Color -
 Hardware - Chrome Wire
 Interior - Black
 Other (Specify) -



Jeffco
 5269 U.S. Hwy. 158
 Advance, NC 27006

Title: J11 Java Formula B2B		
Size: NTS	Drawing Number:	Drawn By: Brian
Date:	Sheet	